

Vettori Bordo Electric Fitting Instructions

Electric Side loading steel towel rail, 23mm round tubes

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.



Safety Instructions

INSTALLATION

The radiator must be installed by a qualified electrician.

Always fix the heated Towel Rail to the wall as per the assembly instructions enclosed.

The installation must be carried out by a specialized firm in compliance with the standards in force.

When installing the towel rail the IEC 60364-7-701 according to the edition in force must be complied.

To supply the towel rail, an omnipolar switch, with at least 3 mm of distance between contacts, must be employed.

When installing in bathrooms or in shower-rooms, the appliance should be installed in such a way to avoid the switch and other controls to be reached by people using the bathroom or the shower. (see Fig. B)

The radiator must not be installed immediately beneath a fixed current outlet.

Take utmost care while installing the Towel Rail to avoid damaging the electronic thermostat and the connecting cable.

In order to avoid every risk to the children, we recommend installing the device in such way that the lowest heating pipe is at least 600 mm above the ground.

DIRECTIONS FOR USE

The towel rail must be used only for the purpose described in the manual. In particular, children must not play with the appliance.

Do not apply on the towel warmer radiator accessories other than those prescribed or recommended by the manufacturer.

Connect the towel warmer to the mains power supply only after it has been fixed to the wall.

The appliance may be used by children over 8 years of age and by persons with reduced physical, sensory or mental capacities, or who lack experience or the necessary knowledge, if they are supervised or have been instructed in its safe use and are aware of the risks involved. Children must not play with the appliance. Cleaning and maintenance must not be carried out by children without supervision. Children under 3 years of age should be kept at a distance if they are not continuously supervised. Children between 3 and 8 years of age must only be able to switch the appliance on/off as long as it has been placed or installed in its normal operating position and they are supervised or instructed concerning the safe use of the appliance and understand the risks. Children between 3 and 8 years of age must not insert the plug, regulate or clean the appliance, nor carry out the maintenance that is to be performed by the user.




It is absolutely prohibited:

- To power the heating element control before having checked the correct installation of the thermostat on the towel warmer towel warmer.
- To cut the power supply cable to disconnect the appliance
- To damage the power supply cable. If the power cable is damaged the complete electric heating element must be repaired or replaced by the manufacturer or by their technical assistance service, or by a qualified person authorised by the manufacturer, so as to prevent any risk.

WARNING:

DURING OPERATION, THE TOWEL RAIL PRESENTS HOT SURFACES, SOME PARTS CAN GET VERY HOT, AND CAUSE BURNS UNLESS PARTICULAR CARE IS TAKEN. Particular attention should be paid to the presence of children and vulnerable people

- During operation it is normal for the last two pipes at the bottom and the first one at the top to remain lukewarm.
- Only fabrics washed with water can be dried on the towel warmer.
- Do not use corrosive or abrasive products or solvents to clean towel warmer or the plastic parts that contain the electrical parts.

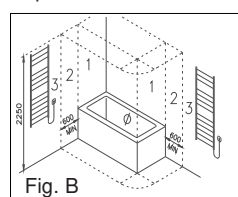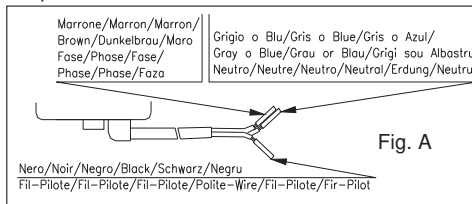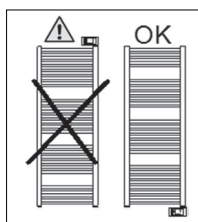


1. Radiators Position

The positioning of the electric ladder rail must be chosen very carefully. It must be installed correctly and in compliance with building and electric regulations.

This towel rail is a registered Class II, IP 44 heating panel, which is protected against water spray. It can be installed in zone 2, provided that the controls are in zone 3 and cannot be reached by anyone using the bath or shower.

- It must not be installed in zone 1.
- Never earth it.
- An electrical plug must not be used.
- Do not install below a power socket. It must only be used indoors.

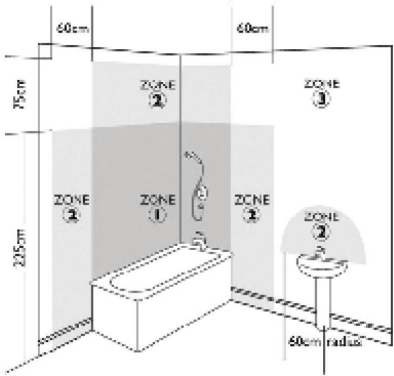

2. Contents

You should have:

- 1 Towel Rail
- 4 Bracket Studs "B"
- 4 Bracket Sleeves "A"
- 4 Spacers "C"
- 4 Screws "D"

You will need:

- Electric Drill / Bits
- Tape measure
- Screwdriver
- Spanner
- Allen Key
- Spirit level

Accessories included

- A 4x
- B 4x
- C 4x
- D 4x

Please Note:
The fixings supplied are not suitable for all wall types.
Please ensure the correct fixings are used for your wall type.

3. Electrical Connection

This towel rail is designed for connection to a ~230 V power supply with a fixed socket. It comes with a connecting cable (A O5 VVF)
The cable must be connected to a junction box behind the towel rail in compliance with the applicable standards.
It is necessary to install an omnipolar cut-out, with a contact distance of at least 3mm.

If the power cable gets damaged or needs to be changed, as a safety precaution it must be replaced by the manufacturer, an authorised after-sales service or a qualified Part P competent person.

4. Bracket Postioning

Fig 1


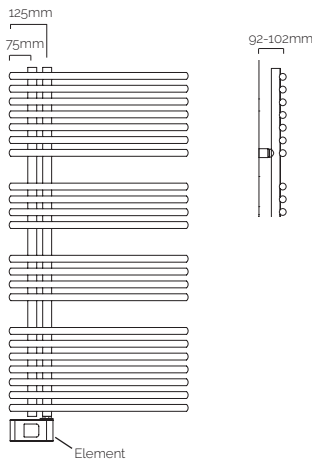


Fig 2

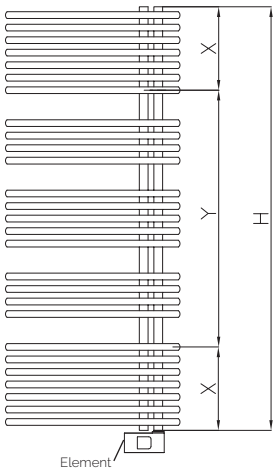


H mm	X mm	Y mm
928	286.5	355
1176	286.5	597
1455	286.5	882
1842	286.5	1269

5. Preparing Towel Rail

Remove rubber protectors on the studs on the rear of the towel rail. Slide spacer "C" onto stud followed by threaded Bracket Stud "B".

PLEASE NOTE: This needs to be hand tightened only, DO NOT USE PUMP PLIERS.

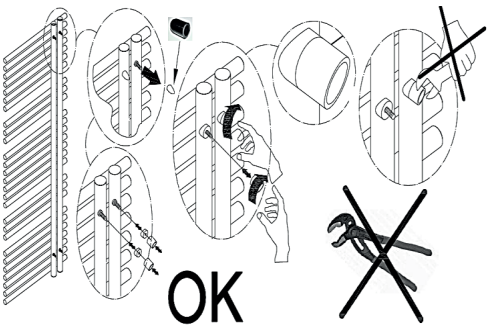

6. Installing Towel Rail


Mark position of brackets on wall. From left to right, measure width of towel rail less 75mm in from shorter side to the nearest bracket and 125mm to the furthest (see **Fig 1**). From the bottom, measure 286.5mm up from the required base of the towel rail for the bottom fixing (see **Fig 2**). Drill & fix the bracket sleeves and check that they are level.

Set the radiator into the two bottom bracket sleeves "A" and mark the two top bracket positions. Drill and fix bracket sleeves "A" to the upper bracket positions.


Lift and fit towel rail as per **Fig 3** and tighten grub screws "D".

PLEASE NOTE: It is essential that all brackets are level before hanging the towel rail

Fig 3

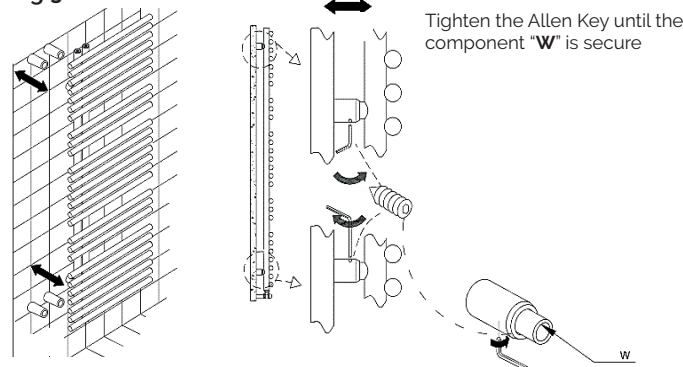

7. Operation and Setting

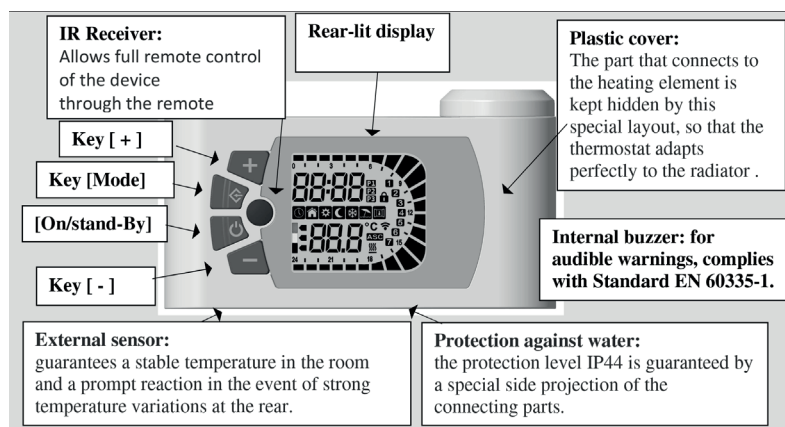

TECHNICAL FEATURES

The Towel Rail is an electrical appliance with the following features:

- Voltage-feed 230V 50Hz, 1ph
- Insulation Class II
- Protection degree IP44
- Length electrical cable 1200 mm
- Electronic ambient thermostat with "pilot wire" control in compliance with EDF/GIFAM/DOMERGIE

INSTALLATION

The radiator must be installed by a qualified electrician.

Always fix the heated Towel Rail to the wall as per the assembly instructions enclosed.

The installation must be carried out by a specialized firm in compliance with the standards in force.

When installing the towel rail the IEC 60364-7-701 according to the edition in force must be complied.

To supply the towel rail, an omnipolar switch, with at least 3 mm of distance between contacts, must be employed.

When installing in bathrooms or in shower-rooms, the appliance should be installed in such a way to avoid the switch and other controls to be reached by people using the bathroom or the shower. (see Fig. B)

The radiator must not be installed immediately beneath a fixed current outlet.

Take utmost care while installing the Towel Rail to avoid damaging the electronic thermostat and the connecting cable.

In order to avoid every risk to the children, we recommend installing the device in such way that the lowest heating pipe is at least 600 mm above the ground.

DIRECTIONS FOR USE

The towel rail must be used only for the purpose described in the manual. In particular, children must not play with the appliance.

Do not apply on the towel warmer radiator accessories other than those prescribed or recommended by the manufacturer.

Connect the towel warmer to the mains power supply only after it has been fixed to the wall.

The appliance may be used by children over 8 years of age and by persons with reduced physical, sensory or mental capacities, or who lack experience or the necessary knowledge, if they are supervised or have been instructed in its safe use and are aware of the risks involved. Children must not play with the appliance. Cleaning and maintenance must not be carried out by children without supervision. Children under 3 years of age should be kept at a distance if they are not continuously supervised. Children between 3 and 8 years of age must only be able to switch the appliance on/off as long as it has been placed or installed in its normal operating position and they are supervised or instructed concerning the safe use of the appliance and understand the risks. Children between 3 and 8 years of age must not insert the plug, regulate or clean the appliance, nor carry out the maintenance that is to be performed by the user.




It is absolutely prohibited:

- To power the heating element control before having checked the correct installation of the thermostat on the towel warmer towel warmer.
- To cut the power supply cable to disconnect the appliance
- To damage the power supply cable. If the power cable is damaged the complete electric heating element must be repaired or replaced by the manufacturer or by their technical assistance service, or by a qualified person authorised by the manufacturer, so as to prevent any risk.


WARNING:

DURING OPERATION, THE TOWEL RAIL PRESENTS HOT SURFACES, SOME PARTS CAN GET VERY HOT, AND CAUSE BURNS UNLESS PARTICULAR CARE IS TAKEN. Particular attention should be paid to the presence of children and vulnerable people

- During operation it is normal for the last two pipes at the bottom and the first one at the top to remain lukewarm.
- Only fabrics washed with water can be dried on the towel warmer.
- Do not use corrosive or abrasive products or solvents to clean towel warmer or the plastic parts that contain the electrical parts.

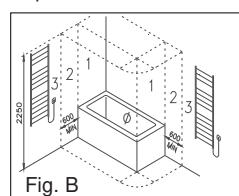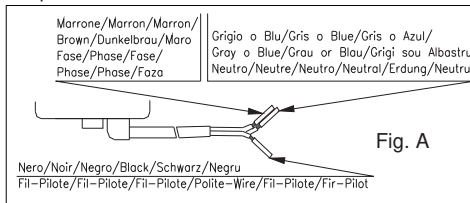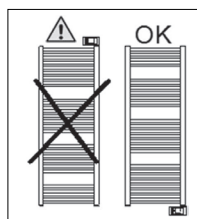

7. Operation and Setting

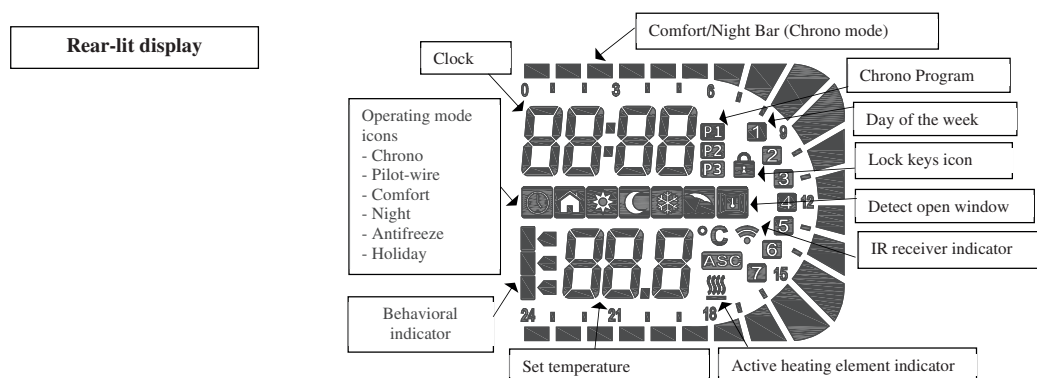

1. ON/Stand-by

Press the **[ON/Stand-by]** key (Fig.1) to switch on the appliance or to activate "Stand-by" mode.

When it is active, the bottom area of the display shows the current time, while the top shows the set mode and the temperature. During "Stand-by", the display shows the letters "Stb", the current time and the day of the week.

NOTE: When the device enters "Stand-by" mode, 2 bips are produced lasting 0.5 seconds. When the thermostat is on, it emits 1 bip per second.

Example of "Comfort" mode



Example of "Stand-by" mode



2. OPERATING MODES SETTABLE FROM THE THERMOSTAT

Press the **[Mode]** key (fig.1) to select the desired mode.

An icon on the display will indicate the active operating mode (see table below).

Table of operating modes

						2h
Chrono	Pilot-wire	Comfort	Night	Antifreeze	Holiday	2h Timer

Sequence of modes:

Chrono -> Holiday -> Pilot-wire -> Comfort -> Night -> Antifreeze -> 2h Timer

2.1 Chrono Mode

This operating mode allows the user to configure different temperature values for each hour of each day of the week. The "Comfort"/"Night" temperatures and the related time intervals can thus be programmed.

To activate this function press the **[Mode]** key until the "Chrono" icon is displayed.

To select pre-set programming of the week P1, P2 or P3, hold down the **[Mode]** key for 3 sec.

Pre-set programs:

- **P1** = from day 1 to day 5 "Comfort" mode from 8 a.m. to 6 p.m. and "Night" mode in the other periods;
- **P2** = from day 1 to day 5 "Comfort" mode from 6 to 9 a.m. and from 5 to 11 p.m.; from day 6 to day 7 "Comfort" mode from 7 a.m. to 11 p.m. and "Night" mode in the other periods;
- **P3** = totally configured by the customer.

2.2 Holiday Mode

"Holiday" mode activates the heating element of the electronic control when the ambient temperature falls below the antifreeze temperature.

It is recommended to use this mode when the room is not occupied for several days.

Press the **[Mode]** key until the respective icon is selected and set the holiday hours.

When this time is past, the thermostat returns to "Comfort" mode.

2.3 Pilot-wire Mode

In "Pilot-wire" mode, the appliance is run by a special control unit that sets the operating mode for all the connected thermostats.

The appliance also recognises the most advanced "Pilot-wire" system with six orders, which allows the use of the functions described below:

1. **Stand-by**: switches off the heating element but the thermostat remains on;
2. **Comfort**: maintains the "Comfort" temperature set by the user;
3. **ECO**: maintains the room temperature 3.5°C lower than the "Comfort" temperature;
4. **Antifreeze**: maintains the room temperature at 7°C;
5. **Comfort-1**: maintains the room temperature 1°C lower than the "Comfort" temperature;
6. **Comfort-2**: maintains the room temperature 2°C lower than the "Comfort" temperature.

To activate the "Pilot-wire" function:

- Press the **[Mode]** key until the "Pilot-wire" icon appears on the display.
- Set the desired temperature with the **[+/-]** keys and wait for the temperature to stop blinking on the display.

NOTE: if the "Pilot-wire" is not installed in the system, the predefined operating mode is "Comfort". In this case, **do not connect the "Pilot-wire" cable of the thermostat to the yellow/green earth cable and insulated it.**

7. Operation and Setting

2.4 Comfort Mode

The "Comfort" temperature corresponds to the temperature desired by the user and it is the temperature used for "Chrono", "Pilot-wire" and "Comfort" modes.

This operating mode is intended for normal use of the appliance.

- Press the **[Mode]** key until the "Comfort" icon appears on the display;
- Set the desired temperature with the **[+/-]** keys and wait for the temperature to stop blinking on the display.

The "Comfort" temperature can be set in the whole interval ("Night" mode temperature + 0.5°C) to 32°C.

2.5 Night Mode

In "Night" mode the settable temperature is lower than the "Comfort" temperature. It is recommended to use this mode during the night or when the room is not used for 2 hours or more.

The "Night" temperature is also used for "Chrono" mode.

- Press the **[Mode]** key until the "Night" icon appears on the display;
- To modify the "Night" temperature, use the **[+/-]** keys and wait for the temperature to stop blinking on the display.

NOTE: The "Night" temperature must always be lower than or the same as the "Comfort" temperature; for this reason the "Night" temperature can be set between 7°C and the "Comfort" temperature minus 0.5°C.

2.6 Antifreeze Mode

In "Antifreeze" mode the temperature is fixed at 7°C. The appliance activates the heating element automatically when the room temperature falls below 7°C.

It is recommended to use this mode when the room is not used for several days.

- Press the **[Mode]** key until the "Antifreeze" icon appears on the display.

2.7 2h Timer Mode

"2h Timer" mode can be used to heat the room rapidly or to dry towels faster.

- Press the **[Mode]** key until the "2h Timer" icon appears on the display.

The heating element is activated for 2 hours, irrespective of the set temperature (in any case, the maximum temperature that can be reached in the room will be 32°C). At the end of the 2 hours, the thermostat returns to the mode set previously. If necessary, the user can deactivate the function at any time by pressing the **[Mode]** key.

NOTE: Do not activate the 2h Timer mode directly from the Stand-by status

FUNCTIONS

3.1 Keyboard lock

It is possible to lock the keys of the device to avoid accidental modifications of the settings.

Hold down the **[+]** and **[-]** keys for 3 seconds to lock all the keys except the **[On/Stand-by]** key.

The key-lock icon will appear on the display.

To unlock the keys, hold down the **[+]** and **[-]** keys again for 3 seconds. The key-lock icon will disappear from the display.

3.2 "Detect open window" function

The "Detect open window" function allows an open window to be detected by perceiving a sudden decrease of the temperature in the room.

In this case, the device deactivates the heating element for a maximum of 30 minutes or until an increase in the ambient temperature indicates that the window has been closed.

When this function is enabled, the  icon is lit.

When the device detects that the window might be open, the "Open window" icon starts to blink.

When the function is deactivated, the "Open window" icon is not shown on the display.

3.3 Adaptive Starting Control (ASC)

If activated, this function switches on the radiator earlier than the "Chrono" program (maximum 2 hours earlier) to ensure that the room has reached the desired temperature at the set time.

Note: the function needs at least a couple of days to reach maximum efficiency.

4 SETTINGS

Setting of the device.

From "Stand-by" mode, hold down the **[Mode]** key for at least 3 seconds.

The message "SEt" will be shown at the bottom of the display:



To select what you want to change:

Press the **[+]** key to choose between tEd (date and time), Pro9 (weekly program P3) and Funct (functions).

4.1 tEd (date and time):

Press the **[Mode]** key to enter editing mode.

The flashing number indicates the day of the week currently selected: press the **[+]/[-]** keys to set the desired day.

Press the **[Mode]** key again to confirm the selected day.

After that, the procedure for entering the time begins and the current time flashes on the display. "Hours": use the **[+]** and **[-]** keys to set the correct hour and confirm the selected value by pressing the **[Mode]** key.

"Minutes": same procedure as for the hours. Confirm the selected value by pressing the **[Mode]** key.

At the end of the procedure, a double beep confirms the data acquired and the thermostat returns to "Stand-by" mode.

7. Operation and Setting

4.2 Pro9 (weekly program P3):

Press the **[Mode]** key to enter P3 editing mode:

Programming begins at 00:00 on the first day of the week.



The upper side display shows the setting time 00 in the example, meaning from 00:00 to 01:00.

Press the **[+]** key if you want the "Comfort" temperature for this time or press the **[-]** key if you want the "Night" temperature, then automatically show 01 which means from 01:00 to 02:00, choose the temperature as before. The empty bar means "Night" temperature, the full bar means "Comfort" temperature.

After having set all 24 hours, press the **[Mode]** key to change to day no. 2 of the week and proceed with the same procedure as the previous day to set all the other days of the week (7).

At the end of the procedure, a double beep confirms the data acquired and the thermostat returns to "Stand-by" mode.

4.3 Funct (functions):

To activate or deactivate "Detect open window" and ASC (Adaptive Starting Control).

Press the **[Mode]** button to enter editing, the detect open window icon will flash: press the **[+]** key if you want to activate (On) or press the **[-]** key if you want to deactivate (Off);

Press the **[Mode]** button to enter editing, now the ASC icon will flash: press the **[+]** key if you want to activate (On) or press the **[-]** key if you want to deactivate (Off);

Press the **[Mode]** button to confirm; at the end of the procedure, a double beep confirms the data acquired and the thermostat returns to "Stand-by" mode.

Note 1: the device might not succeed in detecting an open window if, for example, the thermostat is in an isolated area of the room, far from draughts, close to an external source of heat or if the temperature variation in the room is too slow.

Note 2: when the  symbol is lit, the heating element is active.

Note 3: the  icon indicates that the signal from the remote control is received.

Note 4: in the event of loss of power, the "Chrono" mode settings (current day of the week, current time, daily program for the week) remain in the memory for at least 5 minutes.

Note 5:

Attention: in the case "Timer 2h" mode is activated directly starting from stand-by status ("S t b" word on display) and, finished the two hours, electronics is blocked, execute the following procedure:

1. keep **[Mode]** button pressed for at least 1 second;
2. release **[Mode]** button and immediately press the **[ON / Stand-by]** button.

Point 2 must be done very quickly so we recommend making more than one attempt.

REMOTE CONTROL (OPTIONAL)

The electronic thermostat is equipped with an IR receiver and can therefore be controlled at a distance using an optional remote control. All the modes and the functions described above are available on the remote control.



INFORMATION FOR USERS

in accordance with article 14 of the Directive 2012/19/EU of 07/07/2012 on waste electrical and electronic equipment.

- The symbol shown above, present also on the equipment, indicates that it has been placed on the market and that, when the user decides to get rid of it, it must be disposed of in separate waste collection (including all the components, sub-assemblies and consumer materials which are an integral part of the product).
- For information on the systems for collecting these appliances, please contact the company or another subject enrolled in the various National Registers for other countries in the European Union. Waste produced in the home (or of similar origin) may be consigned to systems for the separate collection of urban waste.
- When buying a new appliance of an equivalent type, it is possible to hand over the old equipment to the seller. The seller will then contact the subject in charge of the collection of the equipment.
- The appropriate separate collection of the scrapped equipment and the subsequent operations of processing, recovery and environment-compatible disposal, allows the avoidance of potential negative effects on the environment and on human health, while favouring the recycling and recovery of the component materials.

The unauthorised disposal of the product by the user entails the application of the sanctions contemplated under the national approval of Directives 2011/65/EU, 2008/98/EC and 2015/1127/EU.