 
 


Dante Horizontal Fitting Instructions

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.

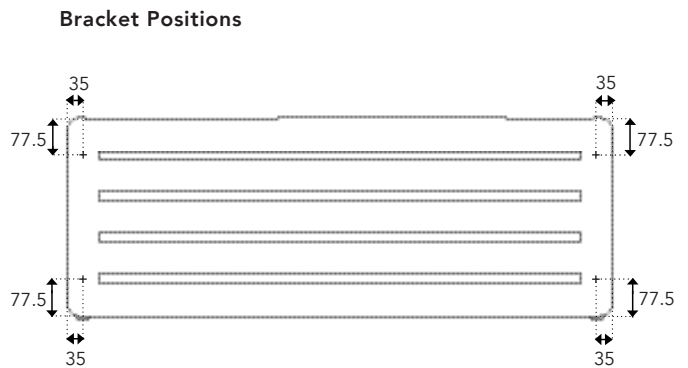

Drawings

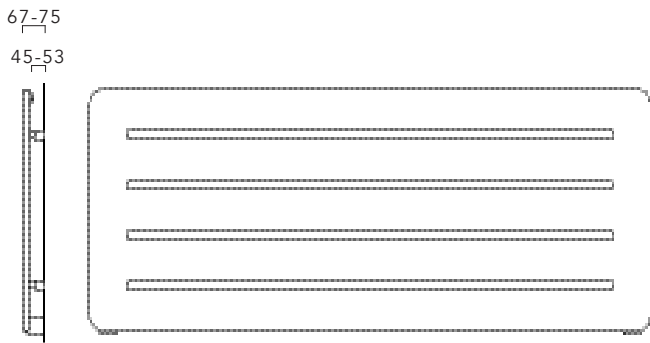

Pipe Centres

Pipe centres left to right	=	width of radiator minus 70mm
Pipe centres from wall	=	45mm - 53mm
Depth from wall	=	67mm - 75mm

1. Unpack & Inspect

This product should have reached you in perfect condition. Please carefully unpack and inspect this radiator and all fittings. Your point of purchase must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on reverse.

2. Contents

You should have:

- 1 Radiator
- 4 Wall Bracket Nipples
- 4 Wall Bracket Sleeves
- 4 Grub Screws
- 1 Airvent
- 1 Blanking Plug

You will need:

- Tape measure
- Electric drill and bits
- Spirit level

3. Fix Brackets

1. Insert bracket nipples into threaded holes on the back of the radiator.
2. The fixing positions for the two top brackets are measured down 77.5mm from the top of the radiator and 35mm in from the edges of the radiator. Mark the positions on the wall and hold up your radiator to check the positions.
3. Ensure the markings are level, and using a suitable drill bit and plugs, fix the top two bracket sleeves to the wall.
4. For accuracy, we suggest hanging the radiator on the top two brackets, then marking the bottom bracket positions.
5. Remove the radiator off the wall and fix the bottom two brackets to the wall.

4. Hang & Commission

6. Hold up the radiator to the wall and slot the four bracket nipples into the bracket sleeves.
7. Use the grub screws provided to secure the radiator by inserting and tightening on the side of the brackets.

Please Note:

In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

Technical Specifications

Materials:	Steel.
Connections:	½" flow and return, underneath connections
Test pressure:	6 Bar
Maximum operating pressure:	4 Bar
Maximum working temperature:	95°C
Packaging:	Wrapped in polyethylene & boxed.

Guarantees & Liabilities

This product is guaranteed for 10 years. As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer. The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions.

The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to us.

Terms & Conditions

All products must be inspected once removed from the packaging and your point of purchase notified within 28 days of delivery of any scratches, blemishes or other damage. Your point of purchase will then agree appropriate action.

Imperfect radiators should therefore not be fitted and we will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting. If we are not notified within 28 days of the date on the signed delivery note then it will be deemed that we have fully complied with our obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation, we cannot accept responsibility for items damaged after delivery.

 
For full details of our Terms and Conditions please visit www.radiatorsdirect.co.uk or call us on 01342 305555

Dante Vertical Fitting Instructions

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.



Drawings

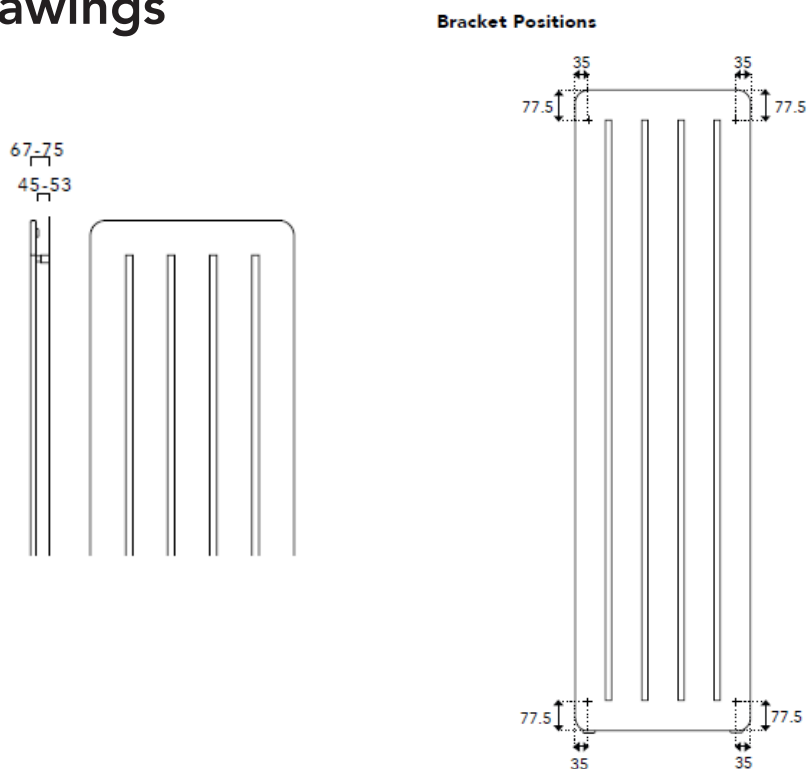

Pipe Centres

- Pipe centres left to right = width of radiator minus 70mm
- Pipe centres from wall = 45mm - 53mm
- Depth from wall = 67mm - 75mm

1. Unpack & Inspect

This product should have reached you in perfect condition. Please carefully unpack and inspect this radiator and all fittings. Your point of purchase must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on reverse.

2. Contents

You should have:

- 1 Radiator
- 4 Wall Bracket Nipples
- 4 Wall Bracket Sleeves
- 4 Grub Screws
- 1 Airvent
- 1 Blanking Plug

You will need:

- Tape measure
- Electric drill and bits
- Spirit level

3. Fix Brackets

1. Insert bracket nipples into threaded holes on the back of the radiator.
2. The fixing positions for the two top brackets are measured down 77.5mm from the top of the radiator and 35mm in from the edges of the radiator. Mark the positions on the wall and hold up your radiator to check the positions.
3. Ensure the markings are level, and using a suitable drill bit and plugs, fix the top two bracket sleeves to the wall.
4. For accuracy, we suggest hanging the radiator on the top two brackets, then marking the bottom bracket positions.
5. Remove the radiator off the wall and fix the bottom two brackets to the wall.

4. Hang & Commission

6. Hold up the radiator to the wall and slot the four bracket nipples into the bracket sleeves.
7. Use the grub screws provided to secure the radiator by inserting and tightening on the side of the brackets.

Please Note:

In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

Technical Specifications

Materials:	Steel.
Connections:	½" flow and return, underneath connections
Test pressure:	6 Bar
Maximum operating pressure:	4 Bar
Maximum working temperature:	95°C
Packaging:	Wrapped in polyethylene & boxed.

Guarantees & Liabilities

This product is guaranteed for 10 years. As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer. The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions.

The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to us.

Terms & Conditions

All products must be inspected once removed from the packaging and your point of purchase notified within 28 days of delivery of any scratches, blemishes or other damage. Your point of purchase will then agree appropriate action.

Imperfect radiators should therefore not be fitted and we will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting. If we are not notified within 28 days of the date on the signed delivery note then it will be deemed that we have fully complied with our obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation, we cannot accept responsibility for items damaged after delivery.

For full details of our Terms and Conditions please visit www.radiatorsdirect.co.uk or call us on 01342 305555